SAINT-GOBAIN

AccuFrame® PLUS ENERGY SEAL

AIR SEAL *AND* FRAMING GUIDE

INSTRUCTIONS

TO BEGIN A WALL SECTION

1. Cut top and bottom plate to length.
2. Align both plates together, narrow edge up.
3. Starting at one end, align and stick the midpoint of an "X" mark to the edge of the plates. An equal amount of foam should overlap each plate.
4. Unroll and apply AccuFrame gasket to the entire section, pressing to ensure adhesion to the wood.
5. Cut the AccuFrame gasket between the two plates.
6. Separate the plates, fold down and press overlap foam to the wood, then assemble the studs using the "X" marks as an alignment guide.
7. Remove and discard liner.

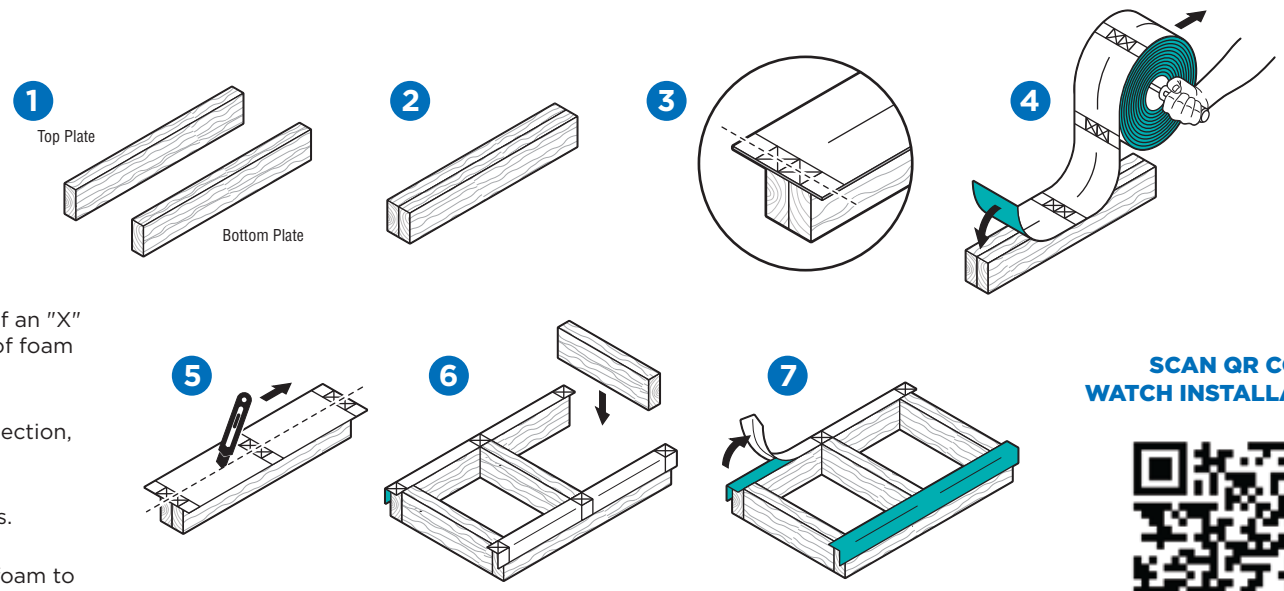

SCAN QR CODE TO WATCH INSTALLATION VIDEO

SPLICING ROLLS TOGETHER FOR LONG WALLS

1. Overlay a small section of a new roll of AccuFrame gasket over a small section of a former piece making sure to align properly with the "X" marks.
2. Cut through both layers of AccuFrame.
3. Remove top duplicate layer of AccuFrame gasket and discard. Wall layout marks are now re-established.

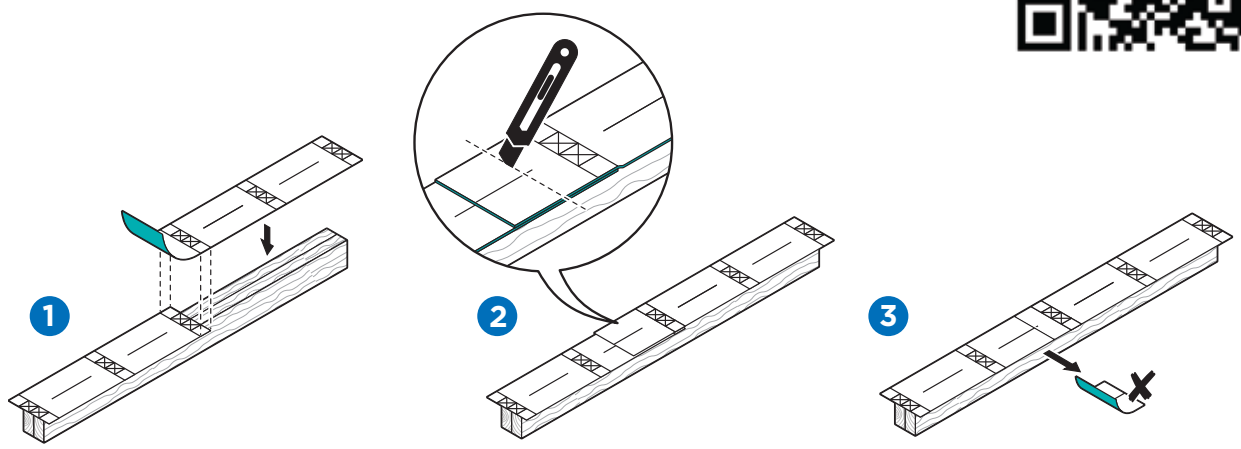

8 60210 00010 4

foams@saint-gobain.com
www.foams.saint-gobain.com

Saint-Gobain Performance Plastics
One Sealants Park
Granville, NY 12832

1-800-724-0883
Tel: (518) 642-2200
Fax: (518) 642-2793